
 
 












 


















 












Original	Rechange
 Input	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Pro. List	 Smart / List
 0	 0
 Last	 Back / Return
 Info	 Info / Angle
 Up	 Up
 Menu	 Menu / Home

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/--
 Down	 Down
 Text	 Text / Goto
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 I/II	 Display / Media
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡i]/Index	 Shift + AV / Input / RDS





Original		Recharge	
MIX	[/≡]/Mix	SHIFT + GOTO TEXT	Shift + Text /
SIZE	[≡♦]/Size	SIZE ZOOM	Zoom / Size
SUBTITLE	[≡B]/Subtitle	EQ SUBTITLE	Subtitle / EQ
HOLD	[≡+]/Hold	HOLD	Stop / Hold
REVEAL	[≡?]/Reveal	SHIFT + ANGLE INFO	Shift + Info / Angle
SOUND	(·)/Sound	TITLE SOUND	Sound / Title
PIC	[]/Pict	FORMAT PICTURE	Picture / Format
FAV	♥/FAV	PC FAV MARKER	Fav / Marker / PC
FREEZE	* /Freeze	OPT-TOOLS SETUP	Setup / OPT /
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
ASPECT	[<>]/Aspect	TOP MENU D.MENU	D.Menu / Top

Original		Recharge	

