



Original	Recharge
VHS Power	Power
Audio	Dual
TV Power	Shift + Power
TV AV	Shift + AV
TV CH +	Shift + Ch +
TV CH -	Shift + Ch -
TV Volume +	Vol +
TV Volume -	Vol -
Operation Select VHS	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
0	0
-/-- / ≥10	Guide
Cancel / Reset	Exit
CH + / Tracking/V-Lock +	Ch +
CH - / Tracking/V-Lock -	Ch -
Input	Media
Repeat	Text
I<< Index/Skip	I<<
>>I Index/Skip	>>I
<< REW	<<
>> FF	>>
Stop	Stop
Pause / Slow	Pause
Play	Play
Menu / Play List	Menu
Menu / Play List	List









Original		Recharge		Original		Recharge	
	DVD Power		Power		9		9
	Audio		Dual		0		0
	TV Power		Shift + Power		-/-- / ≥10		Guide
	TV AV		Shift + AV		Cancel / Reset		Exit
	TV CH +		Shift + Ch +		Repeat		Text
	TV CH -		Shift + Ch -		I<< Index/Skip		I<<
	TV Volume +		Vol +		>>I Index/Skip		>>I
	TV Volume -		Vol -		<< REW		<<
	Operation Select DVD		Smart		>> FF		>>
	1		1		Stop		Stop
	2		2		Pause / Slow		Pause
	3		3		Play		Play
	4		4		Direct Navigator / Top Menu		Shift + Menu
	5		5		Direct Navigator / Top Menu		D. Menu
	6		6		Menu / Play List		Menu
	7		7		Up		Up
	8		8		Left		Left



