



| Original | Recharge |
|---------------|----------|
| Power DVD | Power |
| Direct Tv Rec | TV/R |
| DVD | Smart |
| SD/PC | Media |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| */Cancel | Guide |
| Input Select | AV |
| CH+ | Ch + |

| Original | Recharge |
|----------------------|----------|
| CH- | Ch - |
| ShowView | Blue |
| Manual Skip | Subt |
| I<< Skip | I<< |
| >>I Skip | >>I |
| << Slow/Search | << |
| Slow/Search >> | >> |
| Stop | Stop |
| Pause | Pause |
| Play | Play |
| Direct Navigator/Top | Menu |
| Function | Options |
| Sub Menu | D. Menu |
| Return | Back |
| Up | Up |
| Down | Down |
| Right/II> | Right |





| Original | Recharge |
|------------------|---------------|
| <II/Left | Left |
| Enter | Ok |
| Prog/Check | Sleep |
| Display | Info |
| Status | 3D |
| Time Slip | Format |
| Timer | Shift + AV |
| Erase | Exit |
| Rec Mode | Shift + Rec |
| Rec | Rec |
| A/Ext Link | Red |
| B | Green |
| C/Create Chapter | Yellow |
| Audio | Dual |
| Power Tv | Shift + Power |
| AV Tv | Eject |
| CH+ Tv | Shift + Ch + |

| Original | Recharge |
|------------|--------------|
| CH- Tv | Shift + Ch - |
| Volume+ Tv | Vol + |
| Volume- Tv | Vol - |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

