

 



 

 

 



 

 

 



 

 

 

 

 

 

 





 



 

 

 

 
 
 



 



 



 


 




Original		Recharge		Original		Recharge	
	Sleep		Sleep / Timer		Enter		OK
	Standby AV		Shift + Power		5 Tuner		5
	System Standby		Power		Right		Right
	Video1		Shift + 4		6 Tuner		6
	Video 2		Shift + 1		7 Tuner		7
	DVD		Shift + 2		Down		Down
	MD/Tape		Shift + 5		8 Tuner		8
	CD		Shift + 3		Recall		Fav / Marker / PC
	Tuner		Shift + 6		9 Tuner		9
	Top Menu		Shift + D.Menu / Top Menu		>10 Tuner/Shift/-/-		Guide / EPG / -/-
	1 Tuner		1		0 Tuner		0
	Up		Up		Enter/D.Tuning/Return Tuner		Back / Return
	2 Tuner		2		I<</CH/Presets		I<< / Presets
	DVD Menu		D.Menu / Top		I<</CH Presets-Tuner		Shift + I<< / Presets
	3 Tuner		3		>>/CH/Presets+		>>I / Presets+
	Left		Left		>>/CH Presets+ Tuner		Shift + >>I / Presets+
	4 Tuner		4		Tv/Video/ANT		AV / Input / RDS





Original	Rechange
<<	<< / Tune-
>>	>> / Tune+
D.Skip/TV/VTR	TV/Radio /
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
2CH	Sound / Title
A.F.D.	Eject / Surround
Movie/Music	Audio / Lang I/II
Test Tone	Subtitle / EQ
Main Menu	Menu / Home
Multi CH	Picture / Format
< Menu	Shift + Left
Menu >	Shift + Right
Muting	Mute / Dimmer
-	CH- / Page-
+	CH+ / Page+

Original	Rechange
Master Vol+	Vol+
Tv Vol+	Shift + Vol+
Tv CH+	Shift + CH+ /
Master Vol-	Vol-
Tv Vol-	Shift + Vol-
Tv CH-	Shift + CH- /





Original	Recharge
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Recharge
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original	Recharge
Standby CD	Power
Standby Video	Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 CD	1
1 Video 1	Shift + 1
2 CD	2
2 Video 1	Shift + 2
3 CD	3
3 Video 1	Shift + 3
4 CD	4
4 Video 1	Shift + 4
5 CD	5

Original	Recharge
5 Video 1	Shift + 5
6 CD	6
6 Video 1	Shift + 6
7 CD	7
7 Video 1	Shift + 7
8 CD	8
8 Video 1	Shift + 8
9 CD	9
9 Video 1	Shift + 9
>10/Shift/-/- CD	Guide / EPG / -/-
>10/Shift/-/- Video 1	Shift + Guide / EPG / -/-
0 CD	0
0 Video 1	Shift + 0
Enter/D.Tuning/Return CD	Back / Return
Enter/D.Tuning/Return Video 1	Shift + Back / Return
I<< CD	I<< / Preset-
I<< Video 1	Shift + I<< / Preset-





Original	Recharge
>>I CD	>>I / Preset+
>>I Video 1	+ Shift + >>I / Preset+
<<< CD	<<< / Tune-
<<< Video 1	+ Shift + <<< /
>>> CD	>>> / Tune+
>>> Video 1	+ Shift + >>> /
D.Skip/TV/VTR CD	TV/Radio /
D.Skip/TV/VTR Video 1	+ Shift + TV/Radio / Program
Play CD	Play / Slow
Play Video 1	+ Shift + Play /
Pause CD	Pause / Step / Freeze
Pause Video 1	+ Shift + Pause / Step /
Stop CD	Stop / Hold
Stop Video 1	+ Shift + Stop /
Muting	Mute / Dimmer
Master Vol+	Vol+
Master Vol-	Vol-

Original	Recharge





Original	Recharge
Standby	Power
Standby Video	Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 MD/Tape	1
1 Video 2	Shift + 1
2 MD/Tape	2
2 Video 2	Shift + 2
3 MD/Tape	3
3 Video 2	Shift + 3
4 MD/Tape	4
4 Video 2	Shift + 4
5 MD/Tape	5






 
Original	Recharge
5 Video 2	Shift + 5
6 MD/Tape	6
6 Video 2	Shift + 6
7 MD/Tape	7
7 Video 2	Shift + 7
8 MD/Tape	8
8 Video 2	Shift + 8
9 MD/Tape	9
9 Video 2	Shift + 9
>10/Shift/-/- MD/Tape	Guide / EPG / -/-
>10/Shift/-/- Video 2	Shift + Guide / EPG / -/-
0 MD/Tape	0
0 Video 2	Shift + 0
Enter/D.Tuning/Return MD/Tape	Back / Return
Enter/D.Tuning/Return Video 2	Shift + Back / Return
I<< MD/Tape	I<< / Preset-
I<< Video 2	Shift + I<< / Preset-





Original

Recharge

	>>I MD/Tape		>>I / Preset+
	>>I Video 2		Shift + >>I / Preset+
	<< MD/Tape		<< / Tune-
	<< Video 2		Shift + << /
	>> MD/Tape		>> / Tune+
	>> Video 2		Shift + >> /
	D.Skip/TV/VTR MD/Tape		AV / Input / RDS
	D.Skip/TV/VTR Video 2		Shift + AV / Input / RDS
	Play MD/Tape		Play / Slow
	Play Video 2		Shift + Play /
	Pause MD/Tape		Pause / Step / Freeze
	Pause Video 2		Shift + Pause / Step /
	Stop MD/Tape		Stop / Hold
	Stop Video 2		Shift + Stop /
	Muting		Mute / Dimmer
	Master Vol+		Vol+
	Master Vol-		Vol-

Original

Recharge

