




 









 
















 




 
 
 



 
 




 

 


 






 
 
 

 










 







Original	Rechange	Original	Rechange
 Power	 Power	 SAT	 Smart
 Mute	 Mute	 Up / CH +	 Up
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Down
 3	 3	 Down / CH -	 Ch -
 4	 4	 Right / Vol +	 Right
 5	 5	 Right / Vol +	 Vol +
 6	 6	 Left / Vol -	 Left
 7	 7	 Left / Vol -	 Vol -
 8	 8	 OK	 Ok
 9	 9	 Exit	 Exit
 0	 0	 FAV	 Pre Ch
 Info / ↑	 Info	 Lang	 Dual
 Info / ↑	 >>I	 Pause	 Pause
 Pre / ↓	 I<<	 TV / AV	 AV
 Pre / ↓	 Back	 TV / Rad	 TV/R
 Menu	 Menu	 Red / TXT	 Red




**Original**
**Recharge**

	Red / TXT		Text
	Blue / Audio		Blue
	Blue / Audio		Shift + Dual
	Green / PIG		Green
	Yellow / EPG		Yellow
	Yellow / EPG		Guide

**Original**
**Recharge**