











 



 











Original		Rechange		Original		Rechange	
	Standby		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	Mute		Mute		OK		Ok
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Play		Play		1		1
	Pause		Pause		2		2
	<<		<<		3		3
	>>		>>		4		4
	Record		Rec		5		5
	Stop		Stop		6		6
	Menu		Menu		7		7
	Exit		Exit		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		EPG		Guide





Original	Rechange	Original	Rechange
 Back	 Back		
 Media	 Media		
 USB	 Smart		
 Tv/Radio	 TV/R		
 Audio	 Dual		
 TTX	 Text		
 Timer	 AV		
 FAV	 Pre Ch		
 Res	 Options		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Original	Rechange

