



Original		Recharge		Original		Recharge	
	Power		Power		Reveal		Options
	Mute		Mute		Nicam/A2		Dual
	Red/Title		Red		Tv/Radio		TV/R
	Green/Goto		Green		FAV		Pre Ch
	Yellow/Repeat		Yellow		Nothing		3D
	Blue/A-B		Blue		Sleep		Sleep
	<</Index		<<		Disp		Info
	>>/Hold		>>		Input		AV
	I<</Size		I<<		Menu		Menu
	>>I/Subpage		>>I		Exit		Exit
	Play		Play		Up		Up
	Pause		Pause		Down		Down
	Stop		Stop		Right		Right
	USB		Smart		Left		Left
	Subtitle		Subt		OK		Ok
	TV/TXT		Text		Vol+		Vol +
	Cancel		Media		Vol-		Vol -





Original		Recharge	
EPG	EPG	GUIDE	Guide
CH. L	CH.L	LIST	List
CH+	CH+	CH +	Ch +
CH-	CH-	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
-/--	-/--	SHIFT + GUIDE	Shift + Guide
PICTURE	Picture	SHIFT + PICTURE	Shift + Format
ASPECT	Aspect	PICTURE	Format

Original		Recharge	
RECALL	Recall	RETURN	Back
SOUND	Sound	SHIFT + SOUND	Shift + Dual

