



| Original | | Rechange | | Original | | Rechange | |
|---|-------|---|--------------|---|---------------|---|--------|
|  | Power |  | Power |  | Up / CH + |  | Up |
|  | Mute |  | Mute |  | Down / CH - |  | Down |
|  | 1 |  | 1 |  | Right / Vol + |  | Right |
|  | 2 |  | 2 |  | Up / CH + |  | Ch + |
|  | 3 |  | 3 |  | Right / Vol + |  | Vol + |
|  | 4 |  | 4 |  | Down / CH - |  | Ch - |
|  | 5 |  | 5 |  | Left / Vol - |  | Left |
|  | 6 |  | 6 |  | Left / Vol - |  | Vol - |
|  | 7 |  | 7 |  | OK |  | Ok |
|  | 8 |  | 8 |  | Exit |  | Exit |
|  | 9 |  | 9 |  | FAV |  | Pre Ch |
|  | 0 |  | 0 |  | S-T |  | Subt |
|  | Info |  | Info |  | TV / Radio |  | TV/R |
|  | EPG |  | Guide |  | TXT |  | Text |
|  | Menu |  | Menu |  | Red / ← |  | Red |
|  | P + |  | Shift + Ch + |  | Red / ← |  | Back |
|  | P - |  | Shift + Ch - |  | Blue |  | Blue |



