








 

 



 





 

 

 





 






Original	Recharge
 ON/OFF	 Power
 FPlay	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV Guide	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Picture	 Format

Original	Recharge
 Sound	 Dual
 Source	 AV
 Ch+	 Ch +
 Ch-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 FAV	 Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Ok	 Ok
 Info	 Info
 Text	 Text
 Subtitle	 Subt
 TV	 TV/R





Original	Recharge
YouTube	Media
Netflix	Shift + Smart
APPS	Shift + Media
REC/DVD Menu	Rec
I<<	I<<
>>	>>
Stop	Stop
REC List/DVD	List
<<	<<
>>	>>
Play	Play
Pause	Pause
Red/GOTO	Red
Green/A-B	Green
Yellow/ANGLE	Yellow
Blue/REPEAT	Blue

Original	Recharge

