









Original		Rechange		Original		Rechange	
	OFF	 + 	Shift + Power		Tuning-		<< / Tune-
	ON		Power		Input VCR-2		9
	Standard		Red / Netflix / Search		Input V.AUX		8
	Cinema		Green / APP / Repeat		Input CDR/TAPE		5
	Music		Yellow / YouTube / Repeat		Channel+ /		>> / Preset+
	DSP Simulation		Blue / Prime Video / Random		Channel+ /		CH+ / Page+
	Direct	 + 	Shift + Red / Netflix /		Input AUX		7
	Stereo	 + 	Shift + Green / APP /		Channel- / Preset-		<< / Preset-
	Virtual Surround	 + 	Shift + Yellow / YouTube /		Channel- / Preset-		CH- / Page-
	5CH/7CH Stereo	 + 	Shift + Blue / Prime		Mode		Play / Slow
	Input PHONO		0		Memory		Pause / Step / Freeze
	Input CD		3		Band		Stop / Hold
	Input TUNER		6		Shift		Rec / Rec Mode
	Tuning+		>> / Tune+		Vol+		Vol+
	Input DVD/VDP		2		Vol-		Vol-
	Input TV/DBS		1		Muting		Mute / Dimmer
	Input VCR		4		Setup		Setup / OPT /





Original	Recharge	Original	Recharge
Up	Up		
Surround	Eject / Surround		
Left	Left		
Enter	OK		
Right	Right		
Status / Display	Display / Media		
Down	Down		
Surround Back	Back / Return		
Test Tone	Text / Goto		
Video Select	Picture / Format		
Dimmer	Shift + Mute / Dimmer		
Speaker	Sound / Title		
Input Mode	Shift + 1		
Input Analog	Shift + 2		
Input Ext.In	Shift + 3		

