





 
 

 




 

 

 










 

 






Original	Rechange
 Power	 Power
 Eject	 Eject / Surround
 DVD	 Shift + 2
 TUNER	 Shift + 6
 PORT	 Shift + Fav / Marker / PC
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Audio	 Audio / Lang I/II
 0	 0

Original	Rechange
 Subtitle	 Subtitle / EQ
 I<<	 I<< / Preset-
 Step	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Tuning+ / CH+	 CH+ / Page+
 Vol-	 Vol-
 Remain	 Yellow / YouTube / Repeat
 Tuning- / CH-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up







