



Original	Recharge
Power	Power
Open / Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Audio	Dual
Set	Smart
Subtitle	Subt
Angle	Media
Prog+	Ch +

Original	Recharge
Prog-	Ch -
Input Select	AV
TV / DVD	TV/R
Top Menu	Shift + Menu
Menu	Menu
System Menu	D. Menu
Title List	List
Timer	Sleep
Display	Info
Timer List	Mute
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Return	Back
Options	Options



