




 
 
















 

 




 
 


Original		Recharge		Original		Recharge	
	Power		Power				
	Source		AV				
	Bluetooth/Pair		Smart				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Play		Play				
	Pause		Pause				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	Sound Mode		Dual				
	*		Menu				
	Woofer+		Ch +				
	Woofer-		Ch -				

