
 
 




Original	Rechange
 Power	 Power
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 0
 0 / Zoom	 Eject
 Audio	 Dual
 Mute	 Mute
 Recall	 Back
 FAV	 Pre Ch

Original	Rechange
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 Blue / Pause	 Blue
 Blue / Pause	 Pause
 Red / Text	 Red
 Red / Text	 Text
 Multivideo	 Smart
 Yellow / Subtitle	 Yellow






 

 



 




 










 









 

 







 

 

 


 
 


 
 

 
 
 


 





Original		Rechange		Original		Rechange	
	Yellow / Subtitle		Subt				
	TV / AV		AV				
	Green / P/N		Green				
	SAT		Media				
	TV / Radio		TV/R				
	EPG		Guide				

 
 


 
 

 

 
 






Original	Rechange	Original	Rechange
 Power	 Power	 CH+	 Ch +
 Red	 Red	 CH-	 Ch -
 Green	 Green	 Up	 Up
 Yellow	 Yellow	 Down	 Down
 Blue	 Blue	 Right	 Right
 TV/SAT	 AV	 Left	 Left
 TV/Radio	 TV/R	 OK	 Ok
 Zoom	 Eject	 Vol+	 Vol +
 List	 List	 Vol-	 Vol -
 Audio	 Dual	 P+	 >>
 EPG	 Guide	 P-	 <<
 Timer	 Shift + AV	 Recall	 Pre Ch
 Text	 Text	 FAV	 Shift + Pre Ch
 Exit	 Exit	 1	 1
 Menu	 Menu	 2	 2
 M/P	 Media	 3	 3
 Mute	 Mute	 4	 4





Original	Rechange	Original	Rechange
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 INFO	Info	 INFO	Info
 PAUSE	Pause	 PAUSE	Pause

