







Original	Recharge
 Power	 Power
 Display	 Display / Media
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Music	 Sound / Title
 Copy	 Fav / Marker / PC
 Zoom	 Zoom / Size
 TV System	 TV/Radio /
 Browser	 Info / Angle
 Vol-	 Vol-
 Vol+	 Vol+
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK

Original	Recharge
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Time Shift	 Picture / Format
 0	 0
 Goto	 Text / Goto
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold





Original	Recharge		
TIMER	Timer	TIMER SLEEP	Sleep / Timer
PAUSE/STEP	Pause/Step	STEP - FREEZE	Pause / Step / Freeze
SLOW	I>/Slow	SURROUND	Eject / Surround
PREV	I<<	PRESET-	I<< / Preset-
RECLIST	Rec List	LIBT SMART	Smart / List
INS REPLAY	←/INS Replay	CH PAGE -	CH- / Page-
CM SKIP	→/CM Skip	+ CH PAGE	CH+ / Page+
NEXT	>>I	PRESET+	>>I / Preset+
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
FR	<<	TUNE-	<< / Tune-
F1	F1	TOP MENU D.MENU	D.Menu / Top
SOURCE	Source	RDS AV INPUT	AV / Input / RDS
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
FF	>>	TUNE+	>> / Tune+

Original	Recharge

