










 
 
 

 








 




 
 
 

 






 












 
 

 

 
 
 

 









Original		Rechange		Original		Rechange	
	Power		Power		Guide		Guide
	Mute		Mute		i		Info
	NTSC / PAL		Format		Menu		Menu
	Audio		Dual		Up / CH+		Up
	TV / Radio		AV		Down / CH-		Down
	1		1		Right / Vol+		Right
	2		2		Left / Vol-		Left
	3		3		OK		Ok
	4		4		Up / CH+		Ch +
	5		5		Down / CH-		Ch -
	6		6		Right / Vol+		Vol +
	7		7		Left / Vol-		Vol -
	8		8		↑		Shift + Ch +
	9		9		↓		Shift + Ch -
	0		0		Exit		Exit
	TV / Radio		TV/R		FAV		Pre Ch
	Recall		Back		SAT		Smart





Original	Recharge	Original	Recharge
 <<	 <<		
 Play	 Play		
 >>	 >>		
 > <	 +  Shift + Stop		
 >	 +  Shift + Pause		
 Pause	 Pause		
 Stop	 Stop		
 <	 <<		
 >	 >>		
 Rec	 Rec		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Text	 Text		
 Subtitle	 Subt		

