








 




























Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		6		6
	Power		Power		A/B		Shift + Yellow / YouTube /
	(↔)		Audio / Lang I/II		7		7
	TV		TV/Radio /		8		8
	∨		Sound / Title		9		9
	[#]→		Picture / Format		Output		AV / Input / RDS
	[.≡]		Text / Goto		-/--		Guide / EPG / -/--
	[≡+]		Shift + Stop /		0		0
	[≡◆]		Shift + Zoom /		C		Exit / Cancel / Clear
	[≡x]⊙		Back / Return		IN 123		D.Menu / Top
	[≡?][+]		Sleep / Timer		1-/TP Off		Fav / Marker / PC
	1		1		C00		Setup / OPT /
	2		2		2-/TP On		Shift + Fav / Marker / PC
	3		3		Vol+		Vol+
	[≡i]		Info / Angle		Prog+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		Prog-		CH- / Page-





Original	Recharge
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Display / Media
	 Left
	 Right
	 Zoom / Size
	 Menu / Home
	 Smart / List
	 OK
	 Up
	 Subtitle / EQ
	 >>I / Preset+
	 Shift + Right
	 Down
	 Shift + CH+ /

Original	Recharge
	 I<< / Preset-
	 Shift + Left
	 Shift + Power
	 Shift + CH- /
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze



