



Original		Rechange		Original		Rechange	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / /--		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Original		Rechange		Original		Rechange	
	9		9				
	Menu		Menu / Home				
	Help		Text / Goto				
	0		0				













Original		Rechange		Original		Rechange	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / /-/-		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8




























 

































 


 







Original		Recharge		Original		Recharge	
	9		9				
	Menu		Menu / Home				
	Help		Text / Goto				
	0		0				













Original		Rechange		Original		Rechange	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / -/--		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8






























 

































 


 





Original		Recharge	
	9		9
	Menu		Menu / Home
	Help		Text / Goto
	0		0

Original		Recharge	













Original		Rechange		Original		Rechange	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / /-/-		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Original		Rechange		Original		Rechange	
	9		9				
	Menu		Menu / Home				
	Help		Text / Goto				
	0		0				

