



 



 

 

 



 


 
 


 
 

 

 



 



 

 

 

 

 

 
 
 

 

 

 





 











Original	Recharge	Original	Recharge
 Power	 Power	 Right	 Right
 Pause	 Pause / Step / Freeze	 Left	 Left
 Rec	 Rec / Rec Mode	 [i]/Info	 Info / Angle
 Stop	 Stop / Hold	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Back	 Back / Return
 >>	 >> / Tune+	 List	 Shift + List Smart / List
 <<	 << / Tune-	 Ill/Options	 Setup / OPT /
 Guide	 Guide / EPG / -/-	 Mute	 Mute / Dimmer
 3D	 Shift + 3 3	 Vol+	 Vol+
 Smart Tv	 Smart / List	 Vol-	 Vol-
 Home	 Menu / Home	 CH+	 CH+ / Page+
 Ambilight	 Display / Media	 CH-	 CH- / Page-
 [<>]	 Picture / Format	 Red	 Red / Netflix / Search
 TV	 TV/Radio /	 Green	 Green / APP / Repeat
 OK	 OK	 Yellow	 Yellow / YouTube / Repeat
 Up	 Up	 Blue	 Blue / Prime Video / Random
 Down	 Down	 1	 1





Original		Rechange		Original		Rechange	
2 ABC	2	DVD 2	2				
DEF 3	3	CD - STB 3	3				
4 GHI	4	VIDEO 4	4				
5 JKL	5	TAPE 5	5				
MNO 6	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
0	0	HDMI - SAT 0	0				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
TEXT	Text	GOTO TEXT	Text / Goto				
SOURCE	Source	RDS AV INPUT	AV / Input / RDS				

