



 
 

 

 

 

 

 

 
 
 
 






 







Original	Rechange
 Standby	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-- +10	 SHIFT + GUIDE Shift + Guide
 Recall	 BACK Back
 V+	 VOL + Vol +
 V-	 VOL - Vol -
 Title / Lang	 DUAL Dual

Original	Rechange
 EPG / D.Disp	 GUIDE Guide
 P+	 CH + Ch +
 P-	 CH - Ch -
 Up	 Up
 Left	 Left
 OK	 OK Ok
 Right	 Right
 Down	 Down
 LCD Menu	 TOP MENU MENU Menu
 Picture Format / DVD Setup	 PICTURE FORMAT Format
 Picture Format / DVD Setup	 SETTINGS OPT Options
 SOURCE	 TIMER AV AV
 PMode	 SHIFT + PICTURE FORMAT Shift + Format
 SMode	 SHIFT + SOUND DUAL Shift + Dual
 Mute	 MUTE Mute
 Play / Pause	 PLAY MODE Play
 Play / Pause	 PAUSE Pause





Original		Rechange		Original		Rechange	
	Exit / Stop		Exit		Red / Program		Red
	Exit / Stop		Stop		Red / Program	+	Shift + 1
	Sleep		Sleep		Green / Menu		Green
	Nicam Audio		List		Green / Menu		D. Menu
	Text / <<		Text		Yellow / Repeat		Yellow
	Text / <<		<<		Yellow / Repeat	+	Shift + Text
	FAV Hold / >>		Pre Ch		Blue / AB		Blue
	FAV Hold / >>		>>				
	FAV- / Goto		Media				
	Fav+ / Angle		Smart				
	Index / I<<		Info				
	Index / I<<		I<<				
	Size / >>I		3D				
	Size / >>I		>>I				
	Reveal / Zoom		TV/R				
	Reveal / Zoom	+	Shift + Eject				
	Subpage /		Subt				

