 

 
 


 

 

 


 



 
 


 
 


 
 

 




 



 
 


 

 

 


 
 


 

 
 
 
 


 

 

 







Original		Rechange		Original		Rechange	
	Power		Power		Pop Up Menu		D. Menu
	Open/Close		Eject		Return		Back
	Setting		Options		Top Menu		Menu
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Repeat		Text
	7		7		A-B		TV/R
	8		8		Goto		List
	9		9		Display		Info
	0		0		<</<<		<<
	OSC		Guide		Play/Pause		Play
	Clear		Exit		>> >>		>>
	Home2		Media		<<		<<
	Home		Smart		Stop		Stop



