



Original		Recharge		Original		Recharge	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	TV Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 5		Volume-		Vol-
	AUX1		Shift + 7		Eco		D.Menu / Top
	Tuner		Shift + 6		Info		Info / Angle
	Bluetooth		Shift + 9		Up		Up
	Game		Shift + Fav / Marker / PC		Option		Shift + Setup / OPT / Tools
	AUX2		Shift + Guide / EPG / -/-		Left		Left
	Phono		Shift + 4		Right		Right
	USB		Shift + 8		Back		Back / Return
	Media Player		Display / Media		Down		Down
	CD		Shift + 3		Setup		Setup / OPT /
	Online Music		Smart / List		Home		Menu / Home
	Internet Radio		Shift + Smart / List		Stop		Stop / Hold
	CH/Page+		CH+ / Page+		Pause		Pause / Step / Freeze





Original	Recharge	Original	Recharge
 Play	 Play / Slow	 3	 3
 I<</Tune-	 I<< / Preset-	 4	 4
 I<</Tune-	 Shift + I<< /	 5	 5
 >>I/Tune+	 >>I / Preset+	 6	 6
 >>I/Tune+	 Shift + >> /	 7	 7
 <<	 << / Tune-	 8	 8
 >>	 >> / Tune+	 9	 9
 Smart Select 1	 Shift + Red / Netflix /	 0	 0
 Smart Select 2	 Shift + Green / APP /	 Enter	 OK
 Smart Select 3	 Shift + Yellow / YouTube /		
 Smart Select 4	 Shift + Blue / Prime		
 Green/Movie	 Green / APP / Repeat		
 Red/Music	 Red / Netflix / Search		
 Blue/Game	 Blue / Prime Video / Random		
 Yellow/Pure	 Yellow / YouTube / Repeat		
 1	 1		
 2	 2		





Original	Recharge
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
TV Audio	Shift + 1
Blu-ray	Shift + 5
AUX1	Shift + 7
Tuner	Shift + 6
Bluetooth	Shift + 9
Game	Shift + Fav / Marker / PC
AUX2	Shift + Guide / EPG / -/-
Phono	Shift + 4
USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Online Music	Smart / List
Internet Radio	Shift + Smart / List
CH/Page+	CH+ / Page+

Original	Recharge
Sleep	Sleep / Timer
Volume+	Vol+
CH/Page-	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Up	Up
Left	Left
Right	Right
Back	Back / Return
Down	Down
Home	Menu / Home
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<</Tune-	Shift + << /
I<</Tune-	I<< / Preset-
>>I/Tune+	>>I / Preset+





	Original	Recharge		Original	Recharge
	>> Tune+	+ Shift + >> /		Enter	OK
	<<	<< / Tune-			
	>>	>> / Tune+			
	Smart Select 1	Red / Netflix / Search			
	Smart Select 2	Green / APP / Repeat			
	Smart Select 3	Yellow / YouTube / Repeat			
	Smart Select 4	Blue / Prime Video / Random			
	1	1			
	2	2			
	3	3			
	4	4			
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	0	0			





Original	Rechange
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Rechange
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original		Recharge		Original		Recharge	
	>> /Tune+	+	Shift + >> /		Enter		OK
	<<		<< / Tune-				
	>>		>> / Tune+				
	Smart Select 1		Red / Netflix / Search				
	Smart Select 2		Green / APP / Repeat				
	Smart Select 3		Yellow / YouTube / Repeat				
	Smart Select 4		Blue / Prime Video / Random				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

