
 
 

 


 

 


 



 



 
 


 
 
 
 






 
 



 
 






 
 

 
 
 

 




 




 

 

 

 


 
 


 



Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Smart	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Original	Recharge
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Rotate Text	 + 	Shift + Mute	
Audio-		<<	
Audio+		>>	
Tone-		I<<	
Tone+		>>I	
On/Tim	 + 	Shift + Subt	
Off/Tim	 + 	Shift + Sleep	
Mix Scan	 + 	Shift + TV/R	
Color+ P.Std	 + 	Shift + D. Menu	
Store Text	 + 	Shift + Text	
AV 2	 + 	Shift + AV	
Bright+ Mode	 + 	Shift + Menu	
Search	 + 	Shift + Up	
Disp	 + 	Shift + Info	
Tune-	 + 	Shift + Left	
Aft/Caf	 + 	Shift + Ok	
Tune+	 + 	Shift + Right	
Store	 + 	Shift + Down	
Browse	 + 	Shift + Back	
Contrast+	 + 	Shift + Ch +	
Color- S.Std	 + 	Shift + Dual	
Contrast-	 + 	Shift + Ch -	
Surround	 + 	Shift + Red	
Nicam/Mono	 + 	Shift + Green	
Level L	 + 	Shift + Yellow	



Original	Recharge	Original	Recharge
Level R/Woofers	SHIFT + D Shift + Blue		

