


 
 


 
 




 




 


 


 
 
 

 
 
 

 

 
 




 
 
 
 
Original	Rechange
 Power	 Power
 Display	 Info
 N/P	 Pre Ch
 Open / Close	 Eject
 Language	 Dual
 Angle	 Format
 Subtitle	 Subt
 Prog	 Sleep
 Key b	 Ch -
 Key #	 Ch +
 Return	 Back
 View	 3D
 Mute	 Mute
 PDVD	 Smart
 Time	 AV
 Zoom	 Shift + Eject
 Menu	 Menu

Original	Rechange
 Title	 Media
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Setup	 Options
 PBC	 Red
 A/B	 TV/R
 Repeat	 Text
 L/R	 Green
 RAN	 Yellow
 Volume+	 Vol +
 Volume-	 Vol -
 Step	 Shift + Pause
 Resume	 Shift + Stop
 1	 1





	Original	Recharge		Original	Recharge
	2		2		Pause
	3		3		Slow
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0/10		0		
	10+		Guide		
	Clear / EQ		Exit		
	REV		<<		
	FWD		>>		
	Prev		I<<		
	Next		>>I		
	Stop		Stop		
	Play		Play		

	Original	Recharge		Original	Recharge
	Pause		Pause		
	Slow		Rec		

