

 


 

 


 
 








 


 



 

 







Original	Recharge
 Standby DVD	 Power
 Standby	 Shift + Power
 Tv AV/Video	 TV/R
 TV Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 Cancel	 Exit
 Memo/Mark	 Pre Ch
 Tv Vol+	 Vol +

Original	Recharge
 Tv Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 ShowView/Video	 Smart
 Prog/Check	 Sleep
 SAT Timer	 Media
 Timer	 AV
 Top Menu	 Shift + Menu
 Navigation	 List
 Menu	 Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<<	 I<<



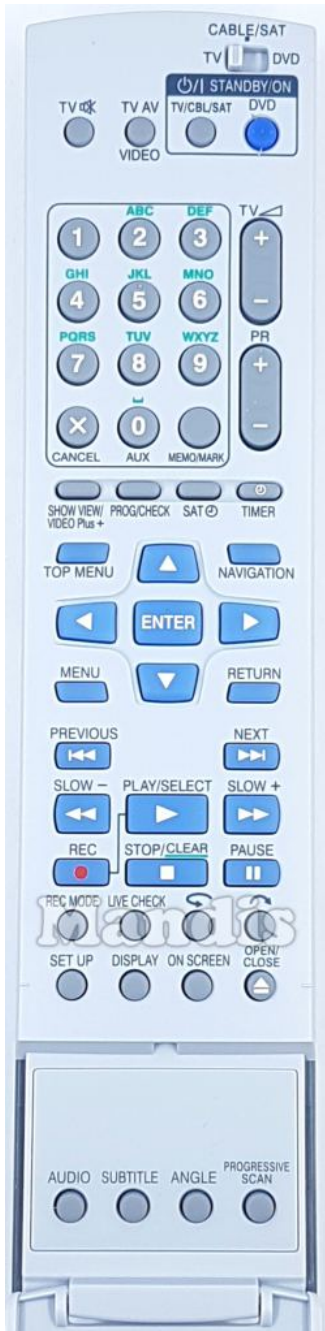

Original	Recharge
>>	>>
<</Slow-	<<
Play/Select	Play
>>/Slow+	>>
Rec	Rec
Stop/Clear	Stop
Pause	Pause
Rec Mode	Shift + Rec
Live Check	Text
←	Yellow
→	Blue
Set Up	Options
On Screen	3D
Display	Info
Open/Close	Eject
Audio	Dual
Subtitle	Subt


Original	Recharge
Angle	D. Menu
Progressive Scan	Format





Original	Recharge	Original	Recharge
 Standby	 Power	 0	 0
 Standby DVD	 Shift + Power	 Cancel	 Back
 Mute	 Mute	 Timer	 AV
 Tv/AV/Video	 TV/R	 Show View/Video Plus	 Smart
 Vol+	 Vol +		
 Vol-	 Vol -		
 PR+	 Ch +		
 PR-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		



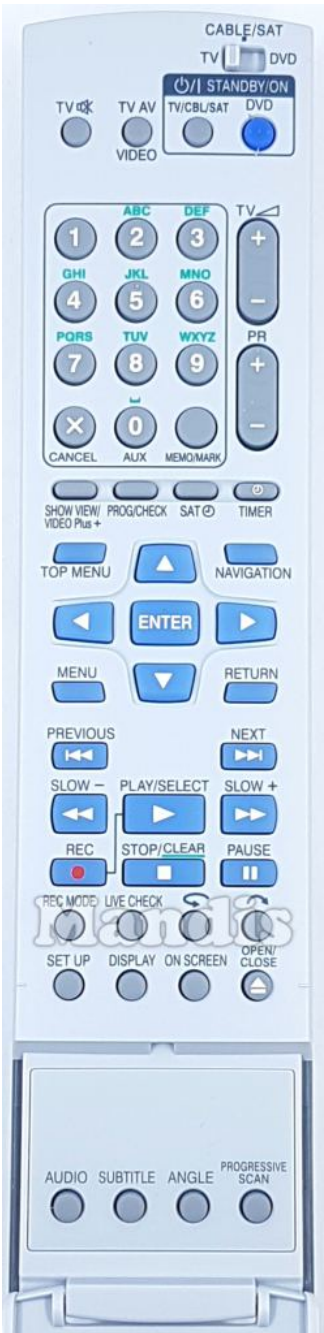

	Original	Rechange
	Standby	Power
	Standby DVD	+ Shift + Power
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	PR+	Ch +
	PR-	Ch -
	Tv Vol+	Vol +
	Tv Vol-	Vol -
	Tv Mute	Mute

	Original	Rechange

