 

 



 

 

 

 

 

 











Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		HDMI		Shift + 0
	1		1		P-		CH- / Page-
	2		2		Media		Shift + Display / Media
	3		3		P.Mode		Picture / Format
	4		4		Home		Shift + Menu /
	5		5		S.Mode		Sound / Title
	6		6		Menu		Menu / Home
	7		7		Up		Up
	8		8		Source		AV / Input / RDS
	9		9		Left		Left
	Lang		Audio / Lang I/II		Enter		OK
	0		0		Right		Right
	Recall		Back / Return		Display		Display / Media
	Vol+		Vol+		Down		Down
	*/Setting		Setup / OPT /		Exit		Exit / Cancel / Clear
	P+		CH+ / Page+		Red		Red / Netflix / Search





Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat		
 Sub.T	 Subtitle / EQ		
 Yellow	 Yellow / YouTube / Repeat		
 Blue/Mouse	 Blue / Prime Video / Random		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 <<	 << / Preset-		
 >>	 >> / Preset+		
 Rec	 Rec / Rec Mode		

Original	Recharge	Original	Recharge

