
 






 

 





 



 

 




 
 








 
 

 
 
 

 
 
 

 
 

 




 


 

 











 



 

 



 
 

 





 

 




 
 







Original	Recharge	Original	Recharge
PWR On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Epg	 +  Shift + Guide	Exit	 Exit
App	 Media	Menu Down	 Down
Opt?	 Options	Audio	 Dual
TV	 TV/R	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	CH/Page+	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7



Original	Recharge	Original	Recharge
8tuv	 8	+	 Shift + Subt
9wxyz	 9	Auth./DISEQC	 Shift + Smart
Guide Pilote	 GUIDE	Sys/Serv	 Shift + Sleep
0/10	 0	Home Cinema	 Smart
FAV Pref.	 PRE-CH	Scan/Setup	 Shift + Options
Red	 A	Interat	 Shift + D. Menu
Green	 B	Pers.	 Shift + Eject
Yellow	 C	Tune-	 Shift + Left
Freeze	 Stop	East	 >>I
Blue	 D	H/V Play	 Play
Dev	 LIST	LNB F.Forward	 >>
22Khz	 3D	Lang./Rewind	 <<
West	 I<<	Alt/16:9	 Format
Radio	 Shift + TV/R	Aft/Caf	 Shift + Ok
On/Off	 Shift + Power	Tune+	 Shift + Right
Dec/Pause	 Pause		 Shift + Exit
	 Shift + Mute	Browse	 Shift + Back




 




 











 










 







 


 
 

 


 









 



 


Original	Recharge	Original	Recharge
PWR On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Epg	 +  Shift + Guide	Exit	 Exit
Subt.List	 Subt	Menu Down	 Down
Opt?	 Options	Back	 Back
App	 Media	Audio	 Dual
Info	 +  Shift + Info	Volume+	 Vol +
Sleep Timer	 Sleep	CH/Page+	 Ch +
TV	 TV/R	Volume-	 Vol -
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7



 
 


Original	Recharge	
8tuv	 8	8
9wxyz	 9	9
Guide Pilote	 GUIDE	Guide
0/10	 0	0
FAV Pref.	 PRE-CH	Pre Ch
Red	 A	Red
Green	 B	Green
Yellow	 C	Yellow
Blue	 D	Blue
On/Off	 + 	Shift + Power
Scan/Setup	 + 	Shift + Options
Radio	 + 	Shift + TV/R
	 + 	Shift + Mute
22Khz	 LIST	List
+	 + 	Shift + Subt
Sys/Serv	 + 	Shift + Sleep
Pers.	 + 	Shift + Eject

Original	Recharge	
SAT Sky	 + 	Shift + AV
Navi Mode	 + 	Shift + Menu
Browse	 + 	Shift + Media
Search	 + 	Shift + Up
Auth./DISEQC	 3D	3D
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
East	 >>	>>
	 + 	Shift + Exit
Lang./Rewind	 <<	<<
H/V Play	 PLAY MODE	Play
Store	 + 	Shift + Down
Alt/16:9	 PICTURE FORMAT	Format
	 + 	Shift + Vol +
Home Cinema	 HOME SMART	Smart
	 + 	Shift + Vol -


 





 
 



 

 

 

 

 
 


 


 
 

 

 





Original	Recharge	Original	Recharge
PWR On/Off	 Power	Exit	 Exit
Mute	 Mute	Menu Down	 Down
Opt?	 Options	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	CH/Page+	 Ch +
Sleep Timer	 Sleep	Audio	 Dual
TV	 TV/R	Volume-	 Vol -
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9



Original	Recharge	Original	Recharge
Guide Pilote	 Guide		
0/10	 0		
FAV Pref.	 Pre Ch		
Red	 Red		
Green	 Green		
Dec/Pause	 Pause		
Lang./Rewind	 <<		
Freeze	 Stop		
LNB F.Forward	 >>		
H/V Play	 Play		
East	 >>		
Yellow	 Yellow		
Blue	 Blue		



Original	Recharge	Original	Recharge
PWR On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Epg	 +  Shift + Guide	Exit	 Exit
Subt.List	 Subt	Menu Down	 Down
Opt?	 Options	Back	 Back
App	 Media	Audio	 Dual
Info	 +  Shift + Info	Volume+	 Vol +
Sleep Timer	 Sleep	CH/Page+	 Ch +
TV	 TV/R	Volume-	 Vol -
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7





Original	Recharge	Original	Recharge
8tuv	 8	22Khz	 List
9wxyz	 9	Radio	 +  Shift + TV/R
Guide Pilote	 Guide	Navi Mode	 +  Shift + Menu
0/10	 0	Search	 +  Shift + Up
FAV Pref.	 Pre Ch	Tune-	 +  Shift + Left
Red	 Red	Tune+	 +  Shift + Right
Green	 Green	Store	 +  Shift + Exit
Yellow	 Yellow		 +  Shift + Down
Blue	 Blue		 +  Shift + Vol +
On/Off	 +  Shift + Power		 +  Shift + Ch +
Scan/Setup	 +  Shift + Options		 +  Shift + Vol -
Dec/Pause	 +  Shift + Mute	Home Cinema	 Smart
+	 +  Shift + Subt		 +  Shift + Ch -
Sys/Serv	 +  Shift + Sleep	De-emph	 +  Shift + 1
Interat	 +  Shift + D. Menu	Swap	 +  Shift + 2
SAT Sky	 +  Shift + AV	P.lock	 +  Shift + 3
		Wn	 +  Shift + 4



