



| Original | Recharge | Original | Recharge |
|--------------|------------------|--------------|---------------|
| Off | Shift + Power | Night | TV/Radio / |
| On | Power | M-Room | Zoom / Size |
| Mute | Mute / Dimmer | Vol- | Vol- |
| AVR | Smart / List | CH. | Info / Angle |
| DVD | Shift + 2 | Up | Up |
| CD | Shift + 3 | SPKR/Menu | Menu / Home |
| Tape | Shift + 5 | Left | Left |
| VID1/VCR | Shift + 4 | Set | OK |
| VID2/TV | Shift + 1 | Right | Right |
| VID3/CBL/SAT | Shift + 0 | Digital | D.Menu / Top |
| VID4 | Shift + 7 | Down | Down |
| AM/FM | Shift + 6 | Delay/Normal | Setup / OPT / |
| 6 CH | Shift + 8 | 1 | 1 |
| Sleep | Sleep / Timer | 2 | 2 |
| Test | Text / Goto | 3 | 3 |
| Vol+ | Vol+ | 4 | 4 |
| Surr. | Eject / Surround | 5 | 5 |





| Original | Recharge | Original | Recharge |
|----------|----------|-------------------|------------------------|
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX - HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| TUN-M | Tun-M | NETFLIX SEARCH | Red / Netflix / Search |
| 9 | 9 | BLUETOOTH 9 | 9 |
| 0 | 0 | HDMI - BAT 0 | 0 |
| MEM | Mem | APP REPEAT | Green / APP / Repeat |
| Tuning ▲ | Tuning ▲ | TUNE+ | >> / Tune+ |
| DIRECT | Direct | RETURN BACK | Back / Return |
| CLEAR | Clear | CLEAR EXIT CANCEL | Exit / Cancel / Clear |
| Preset ▲ | Preset ▲ | PRESET+ | >>I / Preset+ |
| Tuning ▼ | Tuning ▼ | TUNE- | <<< / Tune- |
| OSD | OSD | MEDIA DISPLAY | Display / Media |
| RDS | RDS | RDS AV INPUT | AV / Input / RDS |
| Preset ▼ | Preset ▼ | PRESET- | I<<< / Preset- |
| <<< DVD | <<< DVD | SHIFT + TUNE- | Shift + <<< / |
| Play DVD | Play DVD | SHIFT + SLOW | Shift + Play / Slow |

| Original | Recharge | Original | Recharge |
|----------------|----------------|-----------------------|------------------------|
| >>> DVD | >>> DVD | SHIFT + TUNE+ | Shift + >>> / |
| Stop DVD | Stop DVD | SHIFT + HOLD | Shift + Stop / |
| Pause DVD | Pause DVD | SHIFT + STEP - FREEZE | Shift + Pause / Step / |
| I<<</Skip Down | I<<</Skip Down | SHIFT + PRESET- | Shift + I<<< / Preset- |
| Skip Up/>>>I | Skip Up/>>>I | SHIFT + PRESET+ | Shift + >>>I / Preset+ |





| Original | | Recharge | | Original | | Recharge | |
|----------|--------------|----------|---------------|----------|----------|----------|------------------------|
| | Power Off | | Shift + Power | | 3 | | 3 |
| | Power On | | Power | | 4 | | 4 |
| | Vol+ | | Vol+ | | 5 | | 5 |
| | Night | | TV/Radio / | | 6 | | 6 |
| | [≡] / M-Room | | Zoom / Size | | 7 | | 7 |
| | Vol- | | Vol- | | 8 | | 8 |
| | CH. | | Info / Angle | | Tun-M | | Red / Netflix / Search |
| | Up | | Up | | 9 | | 9 |
| | SPKR/Menu | | Menu / Home | | 0 | | 0 |
| | Left | | Left | | Mem | | Green / APP / Repeat |
| | Set | | OK | | Direct | | Back / Return |
| | Right | | Right | | Clear | | Exit / Cancel / Clear |
| | Digital/Exit | | D.Menu / Top | | Preset ▲ | | Shift + >>I / Preset+ |
| | Down | | Down | | RDS | | AV / Input / RDS |
| | Delay/Normal | | Setup / OPT / | | Preset ▼ | | Shift + I<< / Preset- |
| | 1 | | 1 | | << | | << / Tune- |
| | 2 | | 2 | | Play | | Play / Slow |





| Original | Recharge | Original | Recharge |
|--------------|------------------------|----------------|-----------------------|
| Power On | Power | Mem | Green / APP / Repeat |
| Power Off | Shift + Power | RDS | AV / Input / RDS |
| Vol- | Vol- | >> | >> / Tune+ |
| Vol+ | Vol+ | << | << / Tune- |
| SPKR/Menu | Menu / Home | Play | Play / Slow |
| 1 | 1 | Stop | Stop / Hold |
| Delay/Normal | Setup / OPT / | Direct | Back / Return |
| 2 | 2 | Pause | Pause / Step / Freeze |
| 3 | 3 | Preset ▲ | CH+ / Page+ |
| 4 | 4 | >> | >> / Preset+ |
| 5 | 5 | << | << / Preset- |
| 6 | 6 | Power (On/Off) | Mute / Dimmer |
| 7 | 7 | PR+ VCR | Shift + CH+ / |
| 8 | 8 | PR- VCR | Shift + CH- / |
| 9 | 9 | Vol- VCR | Shift + Vol- |
| 0 | 0 | Vol+ VCR | Shift + Vol+ |
| Tun-M | Red / Netflix / Search | 1 VCR | Shift + 1 |



