



















 




 









 

 






 


 
 
 





 

 

 


 

 







Original	Rechange
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 S	 FAV PRE-CH
 <<	 <<
 Stop	 Stop
 Play	 PLAY MODE Play

Original	Rechange
 >>	 >>
 V.Menu	 E-MANUAL D.MENU
 Mute	 MUTE
 P+	 + CH
 P+	 Up
 P-	 CH -
 P-	 Down
 Vol+	 Right
 Vol+	 + VOL
 Vol-	 Left
 Vol-	 VOL -
 Menu	 TOP MENU MENU
 Display	 DISPLAY INFO
 P.STD	 ECO 3D
 Rec	 REC MODE Rec
 Eject	 ZOOM Eject
 Pause / P/S	 Pause





Original		Recharge		Original	Recharge
	Crystal PB		TV/R		
	TRK up		>>I		
	TRK Down		I<<		
	Index		List		
	Memory		Ok		
	Sleep		Sleep		
	Lang.Sel		Dual		
	Clear		Exit		
	ShowView		Smart		
	Mix		Shift + Text		
	Text Size		Format		
	Subpage		Subt		
	TV/Text		Text		

