
 


 

 
 
 



 

 



 
 


 



 





 
 


 






 
 


 

 

 
 
 














 



 

 




 





 

 


 


 
 



 


Original	Recharge	
On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Pause		Pause
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
Zoom		Shift + Eject
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Return		Back

Original	Recharge	
Menu Left		Left
OK Enter		Ok
Progr.		Sleep
Next		>>I
Menu Right		Right
Prev.		I<<
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
Top Menu		D. Menu
1		1
2		2
3		3
4		4
5		5
Store		Red
6		6



Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Stop	 Stop	Return	 Exit
Pause	 Pause	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Back
Slow Down	 Ch -	Volume+	 Vol +
Subt.	 Subt	Top Menu	 D. Menu
Auto/Track	 Sleep	Next	 >>I
Rep/A-B	 TV/R	Volume-	 Vol -
Zoom	 Shift + Eject	1	 1
Title	 List	2	 2
Pepeat/1/All	 Text	3	 3
DVD/TV	 AV	Prev.	 I<<
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Auto/Track	 Smart	Next	 >>
Stop	 Stop	Progr.	 Sleep
Subt.	 Subt	Volume+	 Vol +
Pause	 Pause	Top Menu	 D. Menu
Zoom	 Shift + Eject	Volume-	 Vol -
Title	 List	Prev.	 <<
Rep/A-B	 TV/R	1	 1
Pepeat/1/All	 Text	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



