
 













Original	Recharge
 Open / Close	 Eject / Surround
 TV Input	 AV / Input / RDS
 TV Power	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 Vol+	 Vol+
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 0	 0

Original	Recharge
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up / Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Smart / List
 Home	 Shift + Menu / Home





	Original	Recharge	Original	Recharge
	I<<	 PRESET- I<< / Preset-		
	Pause	 STEP-FREEZE Pause / Step / Freeze		
	>>I	 PRESET+ >>I / Preset+		
	<<	 TUNE- << / Tune-		
	Play	 SLOW Play / Slow		
	>>	 TUNE+ >> / Tune+		
	Display	 MEDIA DISPLAY Display / Media		
	Stop	 HOLD Stop / Hold		
	SEN	 ANGLE INFO Info / Angle		

