


 

 

 




 

 
 







 



 

 

 

 

 

 

 



 







 
 



 
 

 



 









 








| Original  |            | Recharge  |        | Original  |              | Recharge  |       |
|---|------------|---|--------|---|--------------|---|-------|
|    | Power      |    | Power  |    | 8            |    | 8     |
|    | Sleep      |    | Sleep  |    | 9            |    | 9     |
|    | Open/Close |    | Eject  |    | 0            |    | 0     |
|    | Mute       |    | Mute   |    | Title/Rotate |    | Guide |
|    | V.Sel      |    | Smart  |    | Menu         |    | Menu  |
|    | AV         |    | AV     |    | Info         |    | Info  |
|    | DVD        |    | Media  |    | Exit         |    | Exit  |
|    | Tuner      |    | TV/R   |    | I<           |    | I<<   |
|    | Mode       |    | Format |    | I>           |    | I>>   |
|    | Tone       |    | Subt   |    | <<           |    | <<    |
|  | 1          |  | 1      |  | >>           |  | >>    |
|  | 2          |  | 2      |  | Up           |  | Up    |
|  | 3          |  | 3      |  | Down         |  | Down  |
|  | 4          |  | 4      |  | Right        |  | Right |
|  | 5          |  | 5      |  | Left         |  | Left  |
|  | 6          |  | 6      |  | OK           |  | Ok    |
|  | 7          |  | 7      |  | Vol+         |  | Vol + |





|   | Original         | Recharge   | Original | Recharge |
|---|------------------|--|----------|----------|
|  | Vol-             |  VOL -        |          |          |
|  | Stop/FM Mode     |               |          |          |
|  | Play             |  PLAY MODE    |          |          |
|  | Pause/RDS Search |               |          |          |
|  | RDS/Disp/Clear   |  SETTINGS OPT |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |
|   |                  |  |          |          |

