



 














 




 
 


















 






 





	Original	Rechange		Original	Rechange
	Power		Power		PR-
	Red		Red		Ch -
	Green/Cass.		Green		1
	Yellow/Prog		Yellow		2
	Blue/Mem		Blue		3
	Violet/Status		Smart		4
	Exit		Exit		5
	Menu		Menu		6
	Up		Up		7
	Down		Down		8
	Right		Right		9
	Left		Left		0
	OK		Ok		AV
	Vol+		Vol +		AV
	Vol-		Vol -		Info
	Mute		Mute		Media
	PR+		Ch +		Format
					<<
					Play













 


 









 



 
 






 
 



 
 
 

 
 

 

 










	Original	Rechange	Original	Rechange
	>>		>>	>>
	Rec		Rec	Rec
	Stop		Stop	Stop
	Pause		Pause	Pause





Original	Recharge	Original	Recharge
 Power	 Power	 PR-	 Ch -
 Red	 Red	 1	 1
 Green/Cass.	 Green	 2	 2
 Yellow/Prog	 Yellow	 3	 3
 Blue/Mem	 Blue	 4	 4
 Violet/Status	 Smart	 5	 5
 Menu	 Menu	 6	 6
 Exit	 Exit	 7	 7
 Up	 Up	 8	 8
 Down	 Down	 9	 9
 Right	 Right	 0	 0
 Left	 Left	 AV	 AV
 OK	 Ok		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		
 PR+	 Ch +		

