
 








 


 





 




 

 





Original		Recharge		Original		Recharge	
	Power		Power		Random		Blue / Prime Video / Random
	Sleep		Sleep / Timer		Repeat		Green / APP / Repeat
	Timer Play		Shift + Sleep / Timer		Stop MD		Shift + Stop /
	Timer Rec		Rec / Rec Mode		Pause MD		Shift + Pause / Step /
	1		1		Play MD		Shift + Play /
	2		2		I<</<< MD		I<< / Preset-
	3		3		>>/>> I MD		>>I / Preset+
	4		4		CD		Shift + 3
	5		5		Tape		Shift + 5
	6		6		EXT/MD		AV / Input / RDS
	>10		Guide / EPG / -/--		Tuner		Shift + 6
	7		7		Stop		Stop / Hold
	8		8		</II		Back / Return
	9		9		Play		Play / Slow
	0		0		Tune Up		Shift + >> /
	Program		TV/Radio /		Muting		Mute / Dimmer
	Cancel		Exit / Cancel / Clear		I<</<<		<< / Tune-



