



 




 





 





 







 



 





	Original	Recharge	Original	Recharge
	Power			Play / Pause
	Mute			Play / Pause
	USB			
	BT			
	AUX			
	SD			
	OPT			
	Line In			
	Vol+			
	Vol+			
	Vol-			
	Vol-			
	>>			
	>>			
	<<<			
	<<<			
	Play / Pause	