







 












 

 







 






Original	Rechange
 Power	 Power
 Mute	 Mute
 Display	 Info
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 Subpage	 Media
 Pre-CH	 Pre Ch
 PC	 Smart
 Tv/Video	 TV/R
 Sleep	 Sleep
 Sound	 Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 Mix	 AV
 Teletext	 Text
 Text Size	 Format
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Original	Recharge	Original	Recharge
 Blue	 Blue		
 Index	 List		
 Subtitle	 Subt		
 Hold	 D. Menu		
 Reveal	 Options		
 PIP/POP	 3D		
 PIP Swap	 Back		
 PIP Size	 Eject		

