








 





 




Original		Recharge		Original		Recharge	
	Power On		Power		2		2
	Power Off		Shift + Power		3		3
	Mute		Mute		4		4
	Stereo		Shift + Dual		5		5
	Cable/Sat		Green		6		6
	TV		Blue		7		7
	CD		Yellow		8		8
	Menu		Menu		9		9
	Harman Volume		Smart		0		0
	Exit		Exit		Clear		Shift + Exit
	Tone Control		Back		Direct		Guide
	Up		Up		Vol+		Vol +
	Down		Down		Vol-		Vol -
	Right		Right		CH/Tuner Up		Ch +
	Left		Left		CH/Tuner Down		Ch -
	OK		Ok		Speaker 1		Options
	1		1		Speaker 2		Dual





Original	Recharge
Sleep	Sleep
Dim	TV/R
P.Scan	Text
A.Preset	AV
MEM	Format
RDS	Subt
Prev.CH	Pre Ch
I<	I<<
<<	<<
>>	>>
>I	>>I
Stop	Stop
Play	Play
Pause	Pause
Phono	Shift + 1
FM/AM	Shift + 2
USB	Shift + 3

Original	Recharge
Bluetooth	Shift + 4
vTuner	Shift + 5
Network	Shift + 6
AUX	Shift + 7
Digital	Shift + 8







Original		Rechange		Original		Rechange	
	Power On		Power		2		2
	Power Off		Shift + Power		3		3
	Mute		Mute		4		4
	Stereo		Shift + Dual		5		5
	Cable/SAT		Green		6		6
	TV		Blue		7		7
	CD		Yellow		8		8
	Menu		Menu		9		9
	Harman Volume		Smart		0		0
	Exit		Exit		Clear		Shift + Exit
	Tone Control		Back		Direct		Guide
	Up		Up		Vol+ Stereo		Vol +
	Down		Down		Vol- Stereo		Vol -
	Right		Right		CH/Tuner Down		Ch +
	Left		Left		CH/Tuner Up		Ch -
	OK		Ok		Speaker 1		Options
	1		1		Speaker 2		Dual



