


 


































 


























 






Original		Recharge		Original		Recharge	
	Power		Power		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Yellow		Yellow / YouTube / Repeat
	1		1		Blue		Blue / Prime Video / Random
	2		2		Vol+		Vol+
	3		3		Vol-		Vol-
	4		4		P+		CH+ / Page+
	5		5		P-		CH- / Page-
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	0		0		Down		Down
	DEL		Exit / Cancel / Clear		Back		Back / Return
	TXT		Text / Goto		Rec		Rec / Rec Mode
	Menu		Menu / Home		Picture		Picture / Format
	Guide		Guide / EPG / -/--		Play / Pause		Play / Slow
	Red		Red / Netflix / Search		<<		<< / Tune-





Original	Recharge	Original	Recharge
 Stop	 Stop / Hold		
 Play / Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		

