



| Original | Rechange |
|--|--|
|  Power |  Power |
|  Mute |  Mute |
|  P.Mode |  Shift + Format |
|  S.Mode |  Shift + Dual |
|  Nicam / A2 |  Dual |
|  Sleep |  Sleep |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- |  Guide |

| Original | Rechange |
|---|--|
|  Recall |  Pre Ch |
|  FAV |  Shift + Pre Ch |
|  Fav + |  Shift + Up |
|  Fav - |  Shift + Down |
|  Red |  Red |
|  Green |  Green |
|  Yellow |  Yellow |
|  Blue |  Blue |
|  Source |  AV |
|  Info |  Info |
|  Up |  Up |
|  Right |  Right |
|  Down |  Down |
|  Left |  Left |
|  OK |  Ok |
|  Menu |  Menu |
|  Exit |  Exit |





| Original | | Recharge | |
|---------------------|-------------------|----------|--------------|
| | Vol + | | Vol + |
| | Vol - | | Vol - |
| | Media | | Media |
| | TV / Radio | | TV/R |
| | CH + | | Ch + |
| | CH - | | Ch - |
| | Play/Pause / Text | | Play |
| | Play/Pause / Text | | Pause |
| | Play/Pause / Text | | Text |
| << / Size button"/> | << / Size | | << |
| << / Size button"/> | << / Size | | 3D |
| | >> / Reveal | | >> |
| | Stop / Hold | | Stop |
| | I<< / Index | | I<< |
| | >>I / Subpage | | >>I |
| | Cancel | | Shift + Exit |
| | Subtitle | | Subt |

| Original | | Recharge | |
|----------|-----------|----------|--------------|
| | Rec | | Shift + Text |
| | Timeshift | | Smart |
| | A-B | | Back |
| | EPG | | Format |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

