 















 



 

 





 














Original	Rechange
 Power Receiver	 Power
 DVD	 2
 TV	 1
 VCR	 4
 CD-R	 3
 TUN	 6
 Test Tone	 Display / Media
 Input ATT	 TV/Radio /
 FL Dimmer	 Shift + Mute / Dimmer
 CH Select	 Smart / List
 CH Level-	 CH- / Page-
 CH Level+	 CH+ / Page+
 Effect-	 << / Tune-
 Effect+	 >> / Tune+
 Remote Setup	 Setup / OPT /
 Standard	 Subtitle / EQ
 Adv. Surr.	 Eject / Surround

Original	Rechange
 Stereo	 Audio / Lang I/II
 Input Sel	 AV / Input / RDS
 Signal Select	 Sound / Title
 Midnight /	 Sleep / Timer
 Mute	 Mute / Dimmer
 Up/Tune+	 Up
 Up/Tune+	 Shift + >> /
 Left/ST-	 Left
 Left/ST-	 Shift + I<< / Preset-
 Enter	 OK
 Right/ST+	 Right
 Right/ST+	 Shift + >>I / Preset+
 Down/Tune-	 Down
 Down/Tune-	 Shift + << /
 Master	 Vol+
 Master Volume-	 Vol-
 TV Vol+	 Shift + Vol+





 







 











 


























 
 



















Original		Recharge		Original	Recharge
	Tv Vol-	+	Shift + Vol-		
	TV Input	+	Shift + AV / Input / RDS		
	TV Power	+	Shift + Power		





Original		Rechange		Original		Rechange	
	Power DVD		Power		Channel+ DVD		CH+ / Page+
	1 DVD		1		Channel- DVD		CH- / Page-
	2 DVD		2		Up DVD		Up
	3 DVD		3		Down DVD		Down
	4 DVD		4		Right DVD		Right
	5 DVD		5		Left DVD		Left
	6 DVD		6		Enter DVD		OK
	7 DVD		7		Pause DVD		Pause / Step / Freeze
	8 DVD		8		Rec DVD		Rec / Rec Mode
	9 DVD		9		Play DVD		Play / Slow
	0 DVD		0		<< DVD		<< / Tune-
	+10 DVD		Guide / EPG / -/-		>> DVD		>> / Tune+
	Menu DVD		Menu / Home		>>I DVD		>>I / Preset+
	Top Menu DVD		D.Menu / Top		Stop DVD		Stop / Hold
	Master		Vol+		I<< DVD		I<< / Preset-
	Master volume-		Vol-		Audio DVD		Audio / Lang I/II
	Mute		Mute / Dimmer		Sub Title DVD		Subtitle / EQ





















 



 


























 



 



 










Original	Recharge
Angle DVD	Info / Angle
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Back / Return
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up
Down VCR	Shift + Down

Original	Recharge
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode





Original		Rechange		Original		Rechange	
	Power CD		Power		Channel- CD		CH- / Page-
	1 CD		1		Up CD		Up
	2 CD		2		Down CD		Down
	3 CD		3		Right CD		Right
	4 CD		4		Left CD		Left
	5 CD		5		Enter CD		OK
	6 CD		6		Pause CD		Pause / Step / Freeze
	7 CD		7		Play CD		Play / Slow
	8 CD		8		<< CD		<< / Tune-
	9 CD		9		>> CD		>> / Tune+
	0 CD		0		>>  CD		>>  / Preset+
	+10 CD		Guide / EPG / -/--		I<< CD		I<< / Preset-
	Disc CD		Back / Return		Stop CD		Stop / Hold
	Master		Vol+		Power TVC		Shift + Power
	Master Volume-		Vol-		1 TVC		Shift + 1
	Mute		Mute / Dimmer		2 TVC		Shift + 2
	Channel+ CD		CH+ / Page+		3 TVC		Shift + 3





Original		Rechange	
	4 TVC		Shift + 4
	5 TVC		Shift + 5
	6 TVC		Shift + 6
	7 TVC		Shift + 7
	8 TVC		Shift + 8
	9 TVC		Shift + 9
	0 TVC		Shift + 0
	+10 TVC		Shift + Guide / EPG / --
	Disc TVC		Shift + Back / Return
	Menu TVC		Shift + Menu /
	Up TVC		Shift + Up
	Down TVC		Shift + Down
	Right TVC		Shift + Right
	Left TVC		Shift + Left
	Enter TVC		Shift + OK
	Pause TVC		Shift + Pause / Step /
	Rec TVC		Shift + Rec / Rec Mode

Original		Rechange	
	Play TVC		Shift + Play /
	Stop TVC		Shift + Stop /
	<< TVC		Shift + << /
	>>I TVC		Shift + >>I / Preset+
	>> TVC		Shift + >> /
	I<< TVC		Shift + I<< / Preset-





Original	Rechange
Power TUN	Power
1 TUN	1
2 TUN	2
3 TUN	3
4 TUN	4
5 TUN	5
6 TUN	6
7 TUN	7
8 TUN	8
9 TUN	9
0 TUN	0
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer
Up TUN	Up
Down TUN	Down
Right TUN	Right

Original	Rechange
Left TUN	Left
D.Access TUN	Play / Slow
Band TUN	Smart / List
T.Edit	Pause / Step / Freeze
Class TUN	<< / Tune-
RF ATT TUN	>> / Tune+
MPX TUN	Stop / Hold
Display TUN	Display / Media
Power CDR	Shift + Power
1 CDR	Shift + 1
2 CDR	Shift + 2
3 CDR	Shift + 3
4 CDR	Shift + 4
5 CDR	Shift + 5
6 CDR	Shift + 6
7 CDR	Shift + 7
8 CDR	Shift + 8





Original	Recharge
9 CDR	Shift + 9
0 CDR	Shift + 0
+10 CDR	Shift + Guide / EPG / -/-
Channel+ CDR	Shift + CH+ /
Channel- CDR	Shift + CH- /
Up CDR	Shift + Up
Down CDR	Shift + Down
Right CDR	Shift + Right
Left CDR	Shift + Left
Enter CDR	Shift + OK
Pause CDR	Shift + Pause / Step /
Play CDR	Shift + Play /
Stop CDR	Shift + Stop /
<< CDR	Shift + << /
Rec CDR	Shift + Rec / Rec Mode
I<< CDR	Shift + I<< / Preset-
>> CDR	Shift + >> /

Tune+

Original	Recharge
>>I CDR	Shift + >>I / Preset+

