











 

 













 
 


Original	Rechange
	Zoom / Size
	Power
	TV/Radio /
	Guide / EPG / -/--
	Info / Angle
	Picture / Format
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List

Original	Rechange
	0
	Display / Media
	Setup / OPT /
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Vol+
	Fav / Marker / PC
	CH+ / Page+
	Vol-
	Audio / Lang I/II
	CH- / Page-





Original	Recharge
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / Brightness-	 Yellow / YouTube / Repeat
 Blue /	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Subtitle	 Subtitle / EQ
 <<<	 <<< / Tune-
 <<	 I<< / Preset-
 >>>	 >>> / Tune+
 >>	 >>I / Preset+
 Text	 Text / Goto
 T.Opt	 D.Menu / Top

Original	Recharge

