



Original		Recharge		Original		Recharge	
	System Off		Power		5		5
	Sleep		Sleep / Timer		6		6
	Tv Control On		Shift + Power		7		7
	Tape		Shift + 5		8		8
	DAT/MD		Shift + 2		9		9
	CD		Shift + 3		0		0
	Tuner		Shift + 6		>10		Guide / EPG / -/-
	Phono		Shift + 0		Index/Tv Video		TV/Radio /
	Video 1		Shift + 4		CH/Preset+		CH+ / Page+
	Video 2		Shift + 7		CH/Preset-		CH- / Page-
	Video 3		Shift + 8		DPC Mode		Picture / Format
	LD		Shift + 9		Band EQ		Green / APP / Repeat
	TV		Shift + Guide / EPG / -/-		Slope EQ		Yellow / YouTube / Repeat
	1		1		EQ Tone On/Off		Blue / Prime Video / Random
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right





Original	Recharge	Original	Recharge
Left	Left		
< Sound Field	<< / Tune-		
> Sound Field Mode	>> / Tune+		
Sound Field	Red / Netflix / Search		
Rear Level+	Shift + CH+ /		
Rear Level-	Shift + CH- /		
Center Level+	Shift + Up		
Center Level-	Shift + Down		
Test Tone	Smart / List		
Bass Boost	Display / Media		
Master Vol+	Vol+		
Master Vol-	Vol-		
Muting	Mute / Dimmer		





Original	Rechange	Original	Rechange
System Off	Power	Stop	Stop / Hold
1	1	Play	Play / Slow
2	2	Pause	Pause / Step / Freeze
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
>10	Guide / EPG / -/-		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
D.Skip	Blue / Prime Video / Random		





	Original	Recharge
	System Off	Power
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	>10	Guide / EPG / -/--
	Enter	OK
	<</Sub CH-	<< / Tune-
	>>/Sub CH+	>> / Tune+
	Stop	Stop / Hold
	<	Left

	Original	Recharge
	>	Right
	Pause	Pause / Step / Freeze
	Rec	Rec / Rec Mode





Original		Recharge		Original		Recharge	
	System Off		Power		Pause/P in P		Pause / Step / Freeze
	1		1		Rec/Jump		Rec / Rec Mode
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	<</Sub CH-		<< / Tune-				
	>>/Sub CH+		>> / Tune+				
	<</Posi		<< / Preset-				
	>> /Swap		>> / Preset+				
	Stop/Clear		Stop / Hold				
	Play		Play / Slow				

