




















Original	Recharge	Original	Recharge
 Setup	 Setup / OPT /	 Return / Title	 Shift + Sound / Title
 Key Lock	 Text / Goto	 Clear	 Exit / Cancel / Clear
 Open / Close	 Eject / Surround	 0	 0
 Standby On/Off	 Power	 Display	 Display / Media
 DVD Menu	 D.Menu / Top	 Angle	 Info / Angle
 1	 1	 Stereo /	 Fav / Marker / PC
 2	 2	 Bass	 Picture / Format
 3	 3	 Sound	 Sound / Title
 Audio Menu / Audio L/R	 Audio / Lang I/II	 Auto Mem /	 Red / Netflix / Search
 4	 4	 Band / Digest	 Smart / List
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 Subtitle Menu /	 Subtitle / EQ	 Zoom	 Zoom / Size
 7	 7	 Up	 Up
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Left	 Left
 Return / Title	 Back / Return	 Right	 Right



