





 








 



 






 




























 












Original		Rechange		Original		Rechange	
	Power		Power		Subtitle		Subtitle / EQ
	Menu PBC		Menu / Home		Slow		Pause / Step / Freeze
	Title		Sound / Title		Program		TV/Radio /
	Open / Close		AV / Input / RDS		USB		Picture / Format
	1		1		Audio		Audio / Lang I/II
	2		2		Mute		Mute / Dimmer
	3		3		Repeat		Green / APP / Repeat
	4		4		Setup		Yellow / YouTube / Repeat
	5		5		Up		Up
	6		6		Zoom		Text / Goto
	7		7		Play / Pause		Play / Slow
	8		8		Left		Left
	9		9		Enter		OK
	10/0		0		Right		Right
	10+		Guide / EPG / -/--		Stop		Stop / Hold
	Clear		Fav / Marker / PC		SRC		Back / Return
	Display		Display / Media		Down		Down





Original

Rechange

Original

Rechange

	<<		<< / Tune-
	>>		>> / Tune+
	Vol-		Vol-
	Vol+		Vol+
	I<<		I<< / Preset-
	>>I		>>I / Preset+

