

 

 

 

 

 

 

 



 



 



 
 




Original		Recharge		Original		Recharge	
	Power		Power				
	AUX		7				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	Vol+		Vol+				
	Vol-		Vol-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				

