 



 
 

 
 
 
 



 

 
 


 


 
 

 
 
 


 
 
 
 

 
 
 
 



 






	Original	Recharge	Original	Recharge
	Power			Red/Last
	Mute			Green/TTX
	Tv/Radio			Yellow/PIP
	Audio			Blue/Zoom
	Pause			1
	CH Set			2
	Page >			3
	< Page			4
	Menu			5
	Exit			6
	Up/CH+			7
	Down/CH-			8
	Right			9
	Left			0
	OK			Back
	Vol+			EPG
	Vol-			Info
				Red / Netflix / Search
				Green / APP / Repeat
				Yellow / YouTube / Repeat
				Blue / Prime Video / Random
				1
				2
				3
				4
				5
				6
				7
				8
				9
				0
				Back / Return
				Guide / EPG / -/-
				Info / Angle



