















































 











 


Original	Rechange	Original	Rechange
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Digest	 Text / Goto
Stop	 Stop / Hold	Input Source	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Info	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	R/L	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	DVD/TV	 Smart / List
Timer	 Sleep / Timer	Slow Up	 CH+ / Page+



Original	Recharge	
Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
C/CH		Fav / Marker / PC
Pbc		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

Original	Recharge	
Rep/A-B	 Yellow / YouTube / Repeat	
Random	 Blue / Prime Video / Random	
Resume	 Shift + Play /	
Karaoke/Step	 Shift + Pause / Step /	
Play/Back	 Shift + << /	
Lang	 Shift + Audio / Lang I/II	
Echo+	 Shift + Up	
Angle	 Shift + Info / Angle	
Echo-	 Shift + Down	
Shuffle	 Shift + Blue / Prime	

