


 





 
 


 


| Original | Rechange |
|------------|-----------------------------|
| Power | Power |
| Repeat | Green / APP / Repeat |
| A-B | Yellow / YouTube / Repeat |
| Open/Close | Eject / Surround |
| N/P | Blue / Prime Video / Random |
| Subtitle | Subtitle / EQ |
| Angle | Info / Angle |
| Language | Audio / Lang I/II |
| Setup | Setup / OPT / |
| Title | Sound / Title |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |

| Original | Rechange |
|----------|-------------------|
| 8 | 8 |
| 9 | 9 |
| Time | Sleep / Timer |
| 0 | 0 |
| 10+ | Guide / EPG / -/- |
| Up | Up |
| PBC | D.Menu / Top |
| Down | Down |
| Right | Right |
| Left | Left |
| Enter | OK |
| Menu | Menu / Home |
| Vol+ | Vol+ |
| Vol- | Vol- |
| Zoom | Zoom / Size |
| Return | Back / Return |
| L/R | Smart / List |





| Original | Recharge |
|--|---|
|  Step |  Shift + Pause / Step / |
|  Slow |  Shift + Play / |
|  Program |  TV/Radio / |
|  Clear |  Exit / Cancel / Clear |
|  Mute |  Mute / Dimmer |
|  Display |  Display / Media |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  V-Mode |  Picture / Format |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

