









 








 



 
 







 
 








Original	Rechange	Original	Rechange
 Power	 Power	 OK	 OK
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Menu	 Menu / Home
 3	 3	 EPG	 Guide / EPG / -/--
 4	 4	 Mute	 Mute / Dimmer
 5	 5	 FAV	 Fav / Marker / PC
 6	 6	 Red	 Red / Netflix / Search
 7	 7	 Audio	 Audio / Lang I/II
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Text	 Text / Goto
 Tv/AV	 AV / Input / RDS	 Blue	 Blue / Prime Video / Random
 ←PR	 Back / Return	 Audio L/R	 Setup / OPT /
 Up	 Up		
 Down	 Down		
 Left	 Left		
 Right	 Right		

