



Original		Rechange		Original		Rechange	
	Power		Power		Yellow		Yellow / YouTube / Repeat
	Text		Text / Goto		Blue		Blue / Prime Video / Random
	Input		AV / Input / RDS		[=]		D.Menu / Top
	1		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3		3		Back		Back / Return
	4		4		Exit		Exit / Cancel / Clear
	5		5		Up		Up
	6		6		Down		Down
	7		7		Left		Left
	8		8		Right		Right
	9		9		OK		OK
	0		0		Vol+		Vol+
	Guide		Guide / EPG / -/--		Vol-		Vol-
	CH List		Shift + Smart / List		Home		Menu / Home
	Red		Red / Netflix / Search		Mute		Mute / Dimmer
	Green		Green / APP / Repeat		CH+		CH+ / Page+



